

NetGun User Manual

www.net-gun.com

NetGun



Components: Net Head, Switch, Gas Container, Back Cap



Net Head



Switch



Gas Container



Back Cap

Accessories:



Air-Bottle



Rubber Traction head

Usage:

1. Turn the switch to left position that Marked "ON"(the slender metal cylinder is not reveal inside the switch),straight up, shake it from side to side, then There will be a slight metal voice uttered,that shows the spring has been on reset status automatically already. (if have no voice,pls check the spring has been adsorption on the switch wall or not).Then turn the switch to OFF position(the slight metal will reveal and clip the besides of sheetmetal),so at that time ,the gun is in insurance status.



2. Connect the Switch to Gas Container, and screw it tightly.





3. Then connect the Net Head to the tube.



4. Take one Air-bottle, and put it into the Gas Container slowly aiming at the inner central bracket by slim head of the air-bottle, stop forward when touch the bracket.



Put in the Air-bottle

5. Break the Air-bottle(Key Step): Pick up the back cap, rotate it 5mm away to the dotted line, then the steel-needle nearly puncture the air-bottle. At this time, one hand holds the

middle of gas container tightly, and another hold the back cap, rotate the back cap to the end by one time (about 1 circle) .

Marked: this operation must be tight and consistent, can not stop in the midway. After finish this operate, you will feel a little cold on the gas container, that shows the gas container has been full of gas already.



Rotate the back cap



Rotate to the dotted line



Suspend 5mm away from the dotted line



Rotate to the end of back cap tightly and consistently

6. Turn the switch to ON position (Shooting status), aim the target's head, press the button, the net will be shot out immediately. Will have some voice of gas broken the air.





Turn OFF to ON status, aim the target, then press the button

7. Get back the PE board and net, and put the net back to the net head for next using.
8. Before next using, pls take the empty air-bottle, and take off the gas container.

Mark: Before the switch reset, pls make sure the gas container is off or half-off, then can reset again.

How to re-install the net?

1. Expand the net on the ground, and tied the four traction heads(ABCD) to the quadrangle, take out the net head, keep the four hole upwards, and then put the 4 traction heads to the net holes one-to-one correspondence.

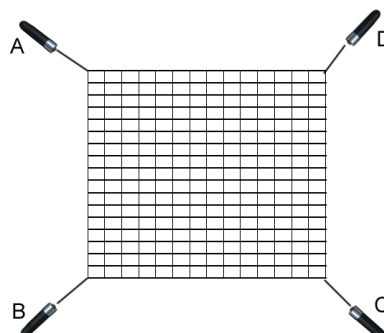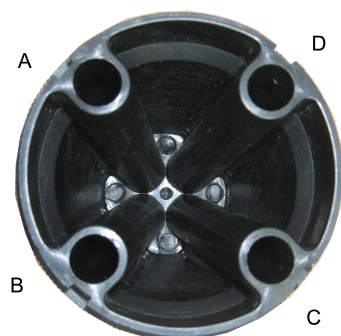

2. After put in the four traction heads, make the four line to one, then wipe the net smoothly from the top to down by hand till the tip, after that, lift the tip of the net and put the tip in the net head, fill all the net in the net head slowly and carefully. At last, cover the PE board.



Technical Parameters:

Air-bottle Pressure Value	2.8±0.2Mpa
Traction head quantity	4
Power delivery	air bottle
Shooting range	20 meter
Expanding area of net	16 sq.m
Using range	within 3-20m
Size	Head*Handle*length φ120 ×φ50×340(mm)
Net Weight	1.036kg